

ENGLISH

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS.

Read the operating instructions carefully before putting the appliance into operation and keep the instructions, the receipt and, if possible, the box with the internal packing. If you give this device to other people, please also pass on the operating instructions.

USER MANUAL SYMBOLS

Important information for your safety is specially marked. It is essential to comply with these instructions in order to avoid accidents and prevent damage to the machine:

⚠ WARNING: This sign warns you of dangers to your health and indicates possible injury risks.

⚠ CAUTION: This sign refers to possible hazards to the machine or other objects.

ℹ NOTE: This sign highlights tips and information

SAFETY INSTRUCTIONS

The device must be used with due care and you must follow the basic safety instructions as follows:

1. Keep it the device away from sources of heat, direct sunlight, humidity (never dip it into any liquid) and sharp edges.
2. Do not immerse the device in water or any other liquid.
3. The device is designed exclusively for private, domestic use and for the envisaged purpose.
4. This device is not suitable for commercial use.
5. To ensure the safety of your children, please keep away from all packaging materials such as plastic bags, boxes, foil etc.
6. **⚠ CAUTION:** Do not allow babies and young children to play with the packaging materials. **Risk of suffocation!**
7. If you do not intend to use the device for a long time, remove the battery before storage to avoid a fluid leakage.

7

ℹ NOTE:

- To change the unit of temperature (°C/°F), press the "+" key.
- When the display starts to weaken during operation, replace the battery.

HUMIDITY THRESHOLD ADJUSTMENT (SOUND NOTIFICATION)

Press and hold the "-" button for 2 seconds to enter the set humidity threshold setting menu. Press the "+" and "-" keys to set the desired humidity threshold. Press the "SET" key to confirm your setting. When the humidity of your room reaches the selected limit, a sound notification will start to sound.

SETTING OF MAIN VIEW DISPLAY MODE

Press the "SET" key once to change the main view display mode (large digits). There are 2 types of main view display modes: in the first view display mode, the time is displayed in the upper position with the large digits, while the temperature and humidity are displayed in the lower position with the lower digits. The second view display mode shows the temperature and humidity in the upper position with the large digits, while the time is displayed at the bottom with the lower digits.

COMFORT LEVEL

The indoor comfort level is calculated according to the indoor humidity and temperature and is reflected in the display with the following icons.

Comfort level icons

Comfort level icons							
Level description	Conditions that favor severe viruses	Conditions that favor viruses	Ideal environmental conditions	Conditions that can cause severe discomfort	Conditions that may cause discomfort	Satisfactory environmental conditions	Good environmental conditions

CLEANING AND CARE

1. Never immerse device in water or in any other liquid.
2. Wipe the housing and the screen of the device with a soft cloth.

STORAGE

1. Always store the device in a safe and clean place. For the better protection of the device, store it in its original packaging.
2. If you do not intend to use the device for a long time, remove the battery before storing it to prevent leakage of the battery fluid.

DISPOSAL OF APPLIANCE AND ACCESSORIES

This symbol appearing on the product, its accessories or accompanying manuals indicates that the product and its electronic accessories should not be disposed of with other household trash.

In order to avoid possible harmful effects on the environment or health due to uncontrolled waste disposal, please separate these products from other types of waste and recycle them.


SPECIFICATIONS

- Measurable indoor temperature range: -10°C ~ +50°C (+14°F ~ +122°F)
- Measurable indoor humidity range: 20% - 95% RH
- Minimum and maximum temperature and humidity display (min/max)
- 5 comfort level icons depending on the indoor humidity
- 2 display formats to choose from at any time (Main: temp and humidity or clock)
- Date display and display in 12 / 24h format
- Date and weekday display
- LCD display with large digits
- With foldable table stand table and magnet on the back part for easy placement on metallic surfaces
- Dimensions: 106.5 x 54.5 x 13mm
- Display dimensions: 96 x 39mm
- Color: White
- Battery powered: 1 x CR2032 (included)

PARTS IDENTIFICATION


FRONT PART

1. Indoor temperature display
2. Indoor humidity indicator
3. Date display
4. Day of the week
5. Time display
6. Comfort level icon

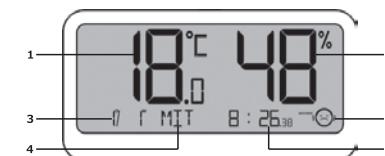

REAR PART

7. Table mounting stand
8. Hanging hook
9. Magnets
10. "SET" button
11. "+" button
12. "-" button
13. Battery compartment

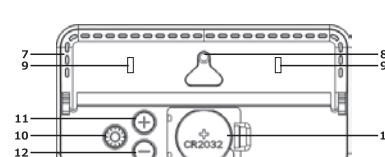

PLACEMENT

There are 4 different ways to mount the device.

1. It has a folding stand with adjustable inclination for table mounting.
2. It has a sticker mounted on the plastic round part that is already mounted on the hanging hook of the device. Peel off the protective film of the adhesive tape on the round plastic part and stick the device anywhere you want.
3. If you want to use the hanging hook (without the round plastic part), slide the round plastic part down and pull it out to remove it from the device. Then hang your device at the desired location using the hanging hook.
4. In case you want to place the thermometer on a metal surface, it has "hidden" magnets on the rear part of the device. Slide the round plastic part down and pull it out to remove it from the device. Then place the device on any metal surface you wish.

8

USAGE

1. Remove the battery compartment cover on the back of the weather station and insert one CR2032 battery (included). Follow the correct polarity during installation. Close the battery compartment.
2. Once the battery is inserted, the device will detect and display the internal temperature and humidity.

DEVICE SETTING

1. Push and hold the "SET" button to select the desired time display format (12/24h). Push the "SET" button to confirm your setting.
2. Use the "+" and "-" buttons to set the correct hour. Push the "SET" button to confirm your setting.
3. Use the "+" and "-" buttons to set the correct minutes. Push the "SET" button to confirm your setting.
4. Use the "+" and "-" buttons to set the desired display date. Push the "SET" button to confirm your setting.
5. Use the "+" and "-" buttons to set the correct year. Push the "SET" button to confirm your setting.
6. Use the "+" and "-" buttons to set the correct month. Push the "SET" button to confirm your setting.
7. Use the "+" and "-" buttons to set the correct day. Push the "SET" button to confirm your setting.
8. Use the "+" and "-" buttons to set the desired display language. Push the "SET" button to confirm your setting.

ℹ NOTE: After 10 seconds without pressing any key, the clock switches automatically from Set Mode to Normal Time Mode.

TEMPERATURE / HUMIDITY DETECTION

- The indoor temperature range is -9.9°C (-14°F) to +50°C (+122°F). If the temperature indicator is below the measurable range of the appliance, "LL.L" is displayed. If the temperature is bigger, "HH.H" is displayed.
- The range of indoor temperature values is 20% RH ~ 95% RH. If the humidity indicator is below 20% RH, "19% RH" is displayed. If the humidity indicator is above 95% RH, "96% RH" is displayed.

MAXIMUM/MINIMUM TEMPERATURE AND HUMIDITY

To toggle indoor maximum, minimum temperature and humidity data, push the "+" button:

- Once to show the maximum temperature and humidity values.
- Twice to show the minimum temperature and humidity values.
- Three times to return to the current temperature and humidity levels.

To reset the maximum and minimum temperature and humidity, push and hold down the "+" button for about 3 seconds. This will reset all minimum and maximum data recorded to the current displayed values.

9

Household users should contact either the store where they purchased this product or their local services for details of where and how they can return these products for environmentally safe recycling.

DISPOSAL OF BATTERIES

This marking on the battery, manual or packaging indicates that the batteries of this product should not be disposed of with other household waste at the end of their life cycle.